



20 X 36 CAPITOL


STEEL PANEL FORM SYSTEM

Pool Kit Specialists



INSTALLATION PROCESS

1 Assemble Panel Forms

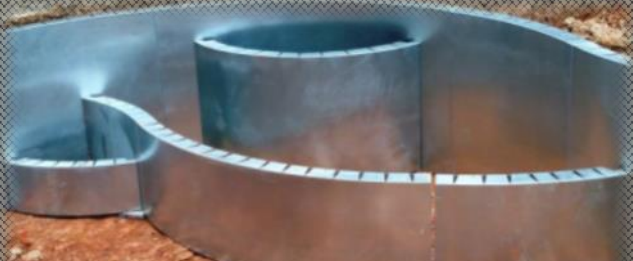


Fasten interior panel forms to perimeter panels using pre-punched bolt holes.

2 Backfill & Liner Track



Backfill with gravel/stone. Install liner track and mud lip extension forms.

3 Finish Treads w/Concrete

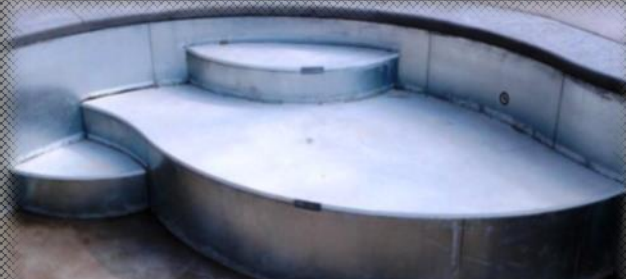

Tape off liner track channels. Finish off all treads with concrete.

4 Foam Treads & Vac



Adhere wall foam to top of each tread. Run an extra vacuum during liner install.

Custom is our Standard

